

Table of Contents

Documentation.....1
 Download Drivers.....1
 How to update Smart-Card Reader Drivers.....1

Documentation


- Infinity-Box web site: www.infinity-box.com

Download Drivers

- [FT SCR2000 Smart-Card Drivers](#)

How to update Smart-Card Reader Drivers


In some cases it may be problems with automatically installed Drivers for Fetian FT SCR 2000 Smart-Card Readers. If during Box/Dongle firmware upgrade you will see the error like "**Identification check error: Server reported error [0010] Dongle authentication failed. Retry upgrade**" this means you have to update Smart-Card Reader Drivers.

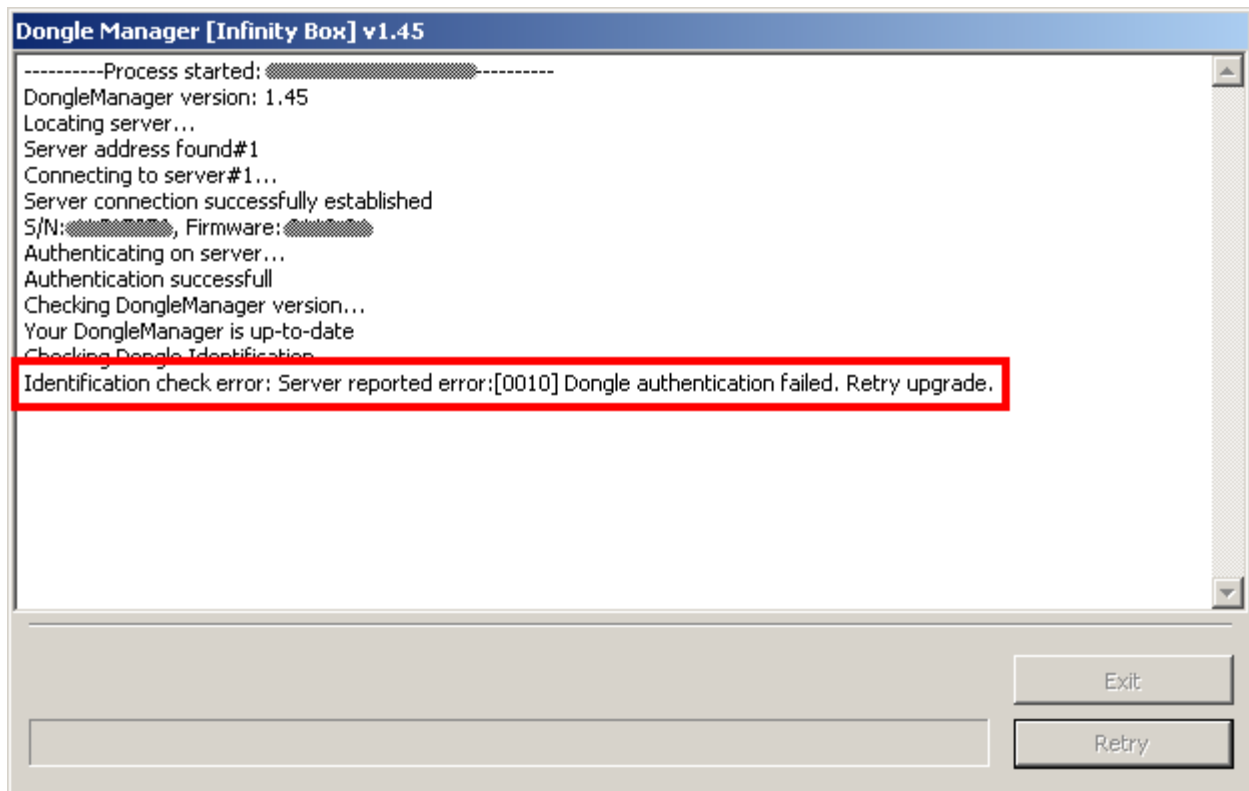


1. Download drivers from support area
2. Unpack drivers into folder at your PC
3. Connect Box/Dongle to PC
4. Go to **Device Manager**




5. Make right mouse button click to "**USB Token Device**" and select "**Properties**". You will see information about driver version

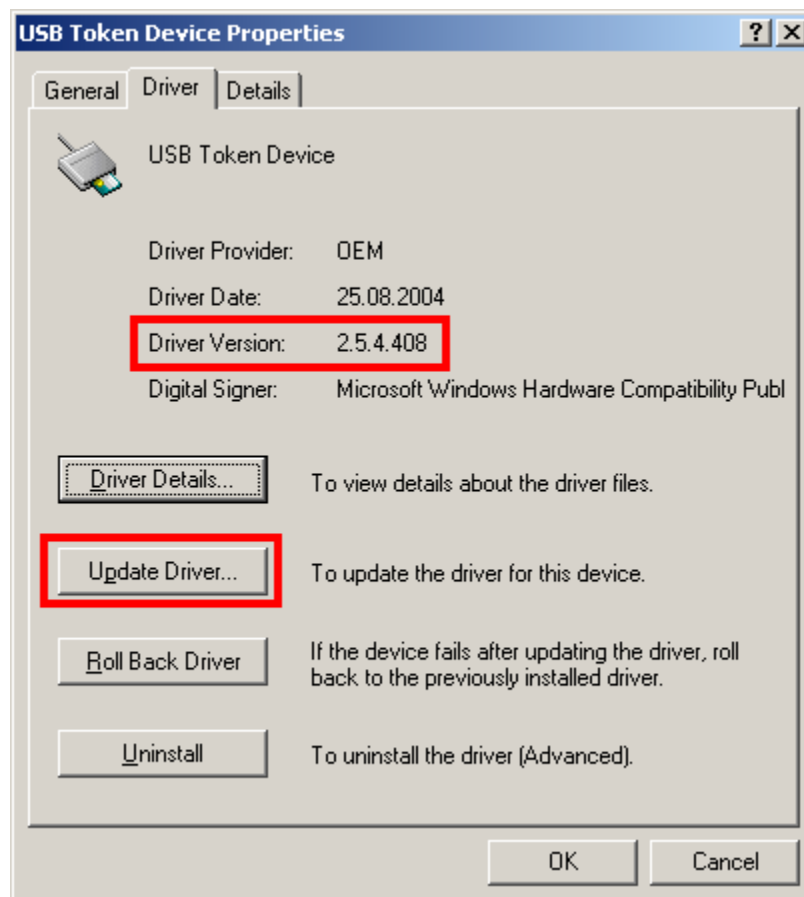


6. Click to "**Update Driver...**" button
7. Select "**No, not this time**" and click to "**Next**" button

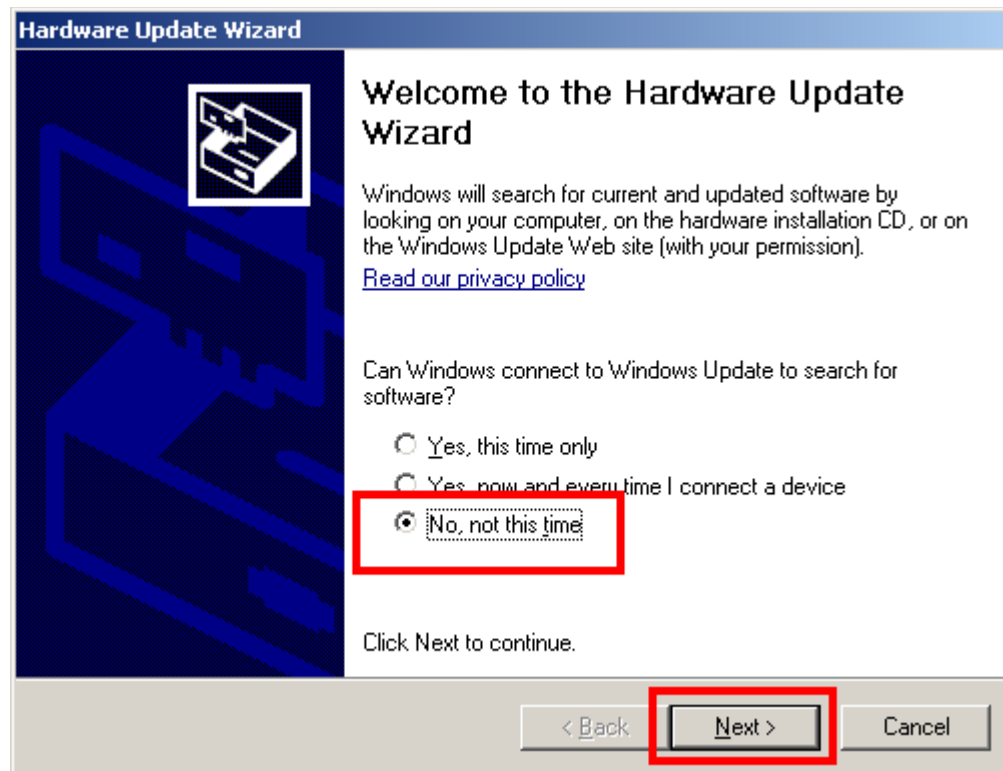


8. Select "**Install from a list or specific location (Advanced)**" and click to "**Next**" button

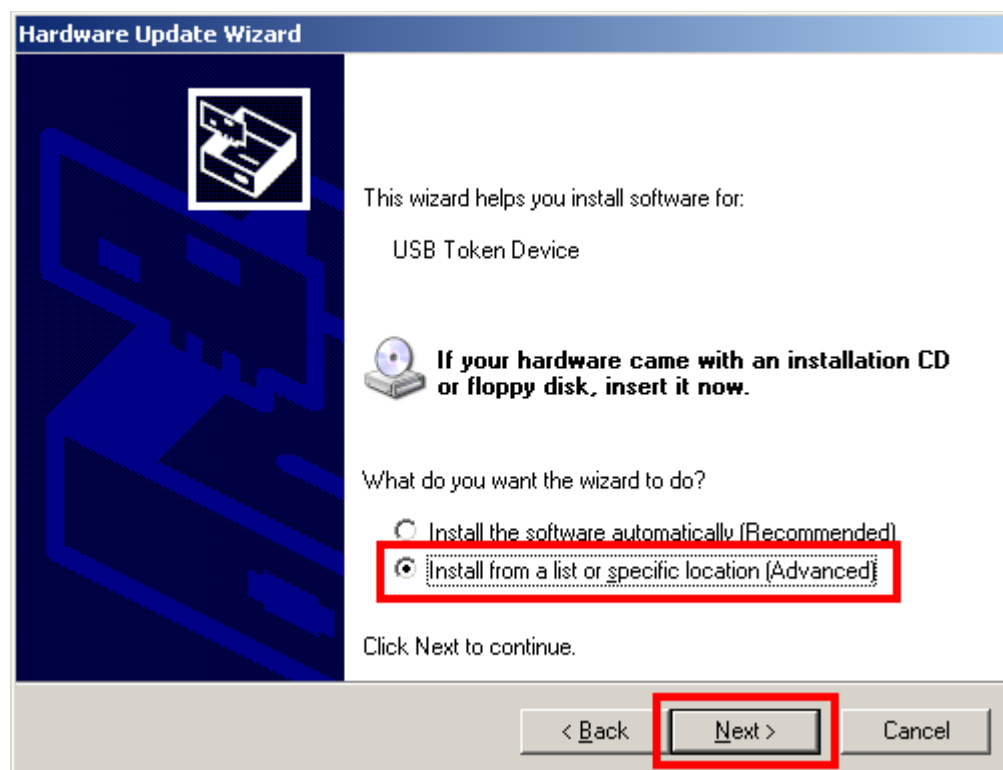



9. Select "**Do not search. I will choose the driver to install**" and click to "**Next**" button

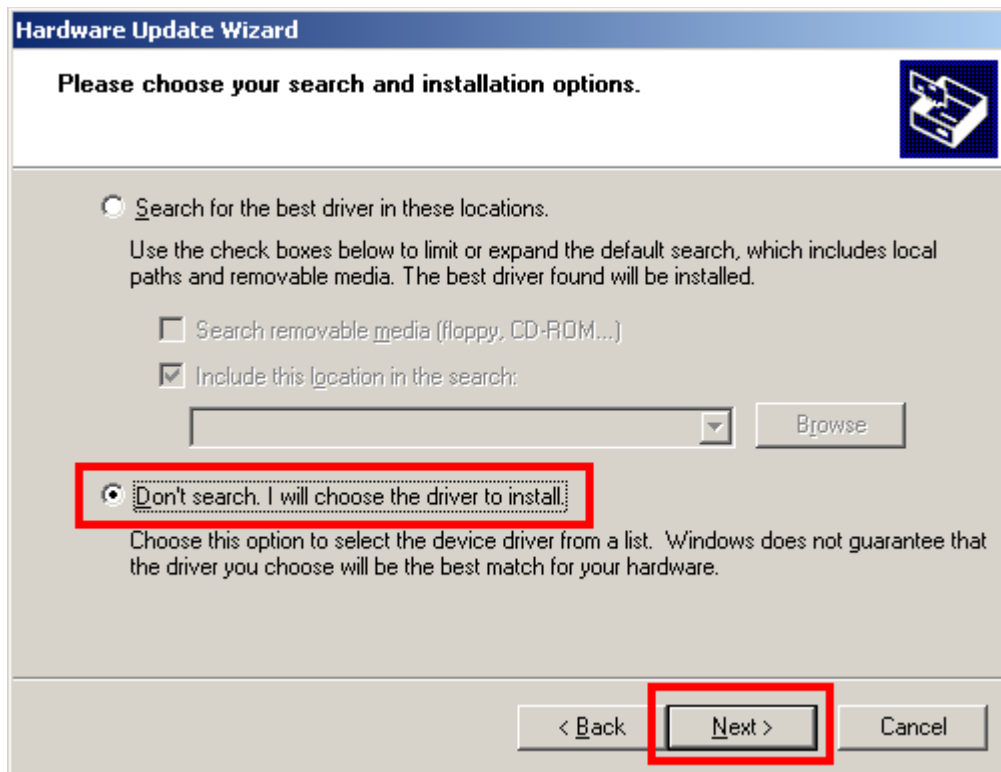


10. Click to "**Have Disk...**" button

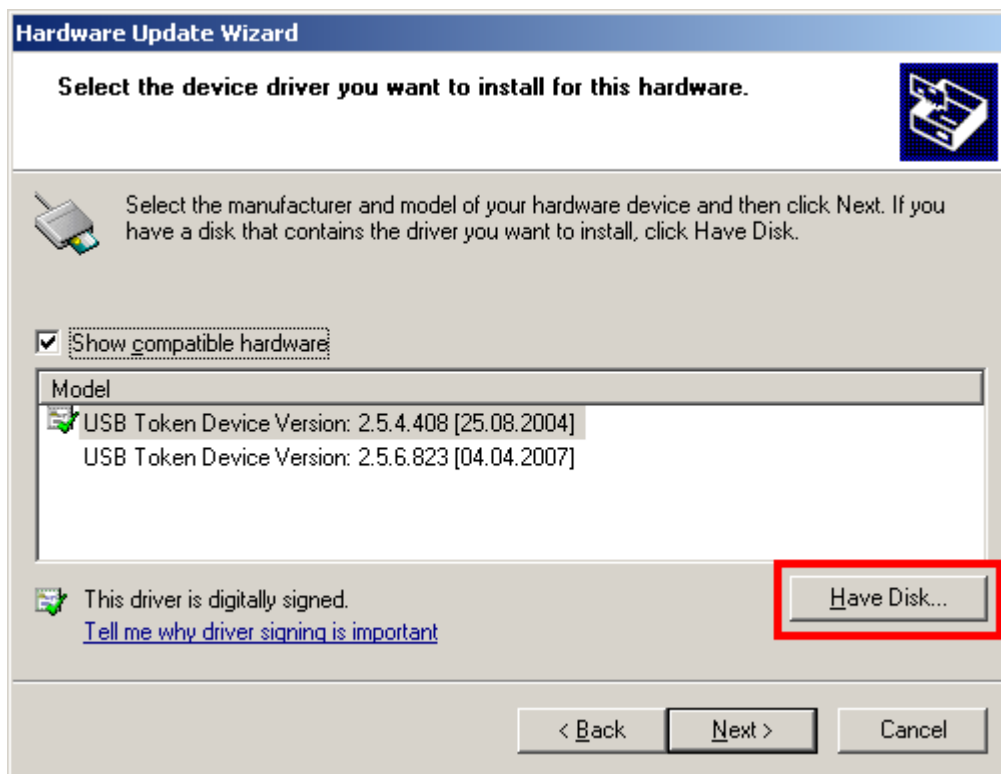


11. Select folder with drivers

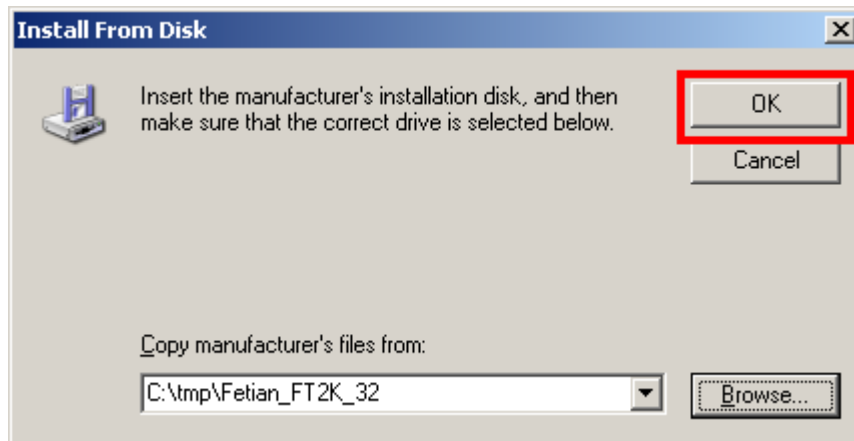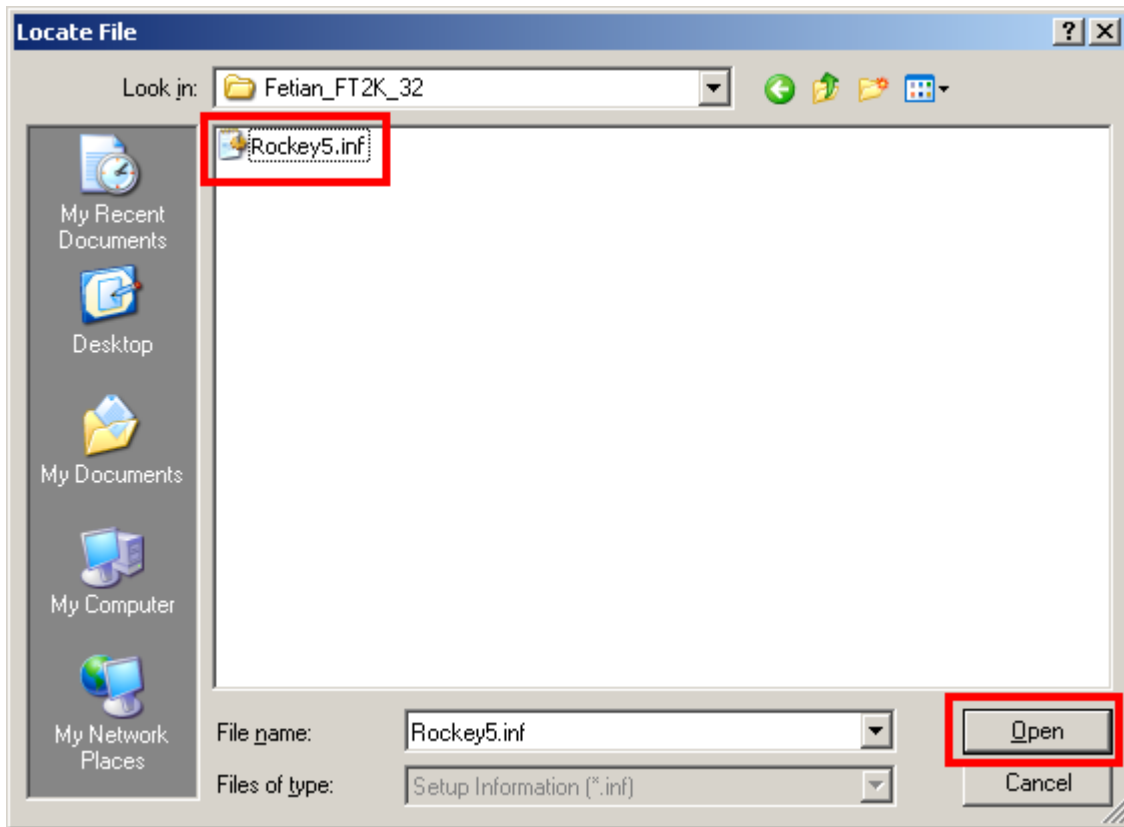

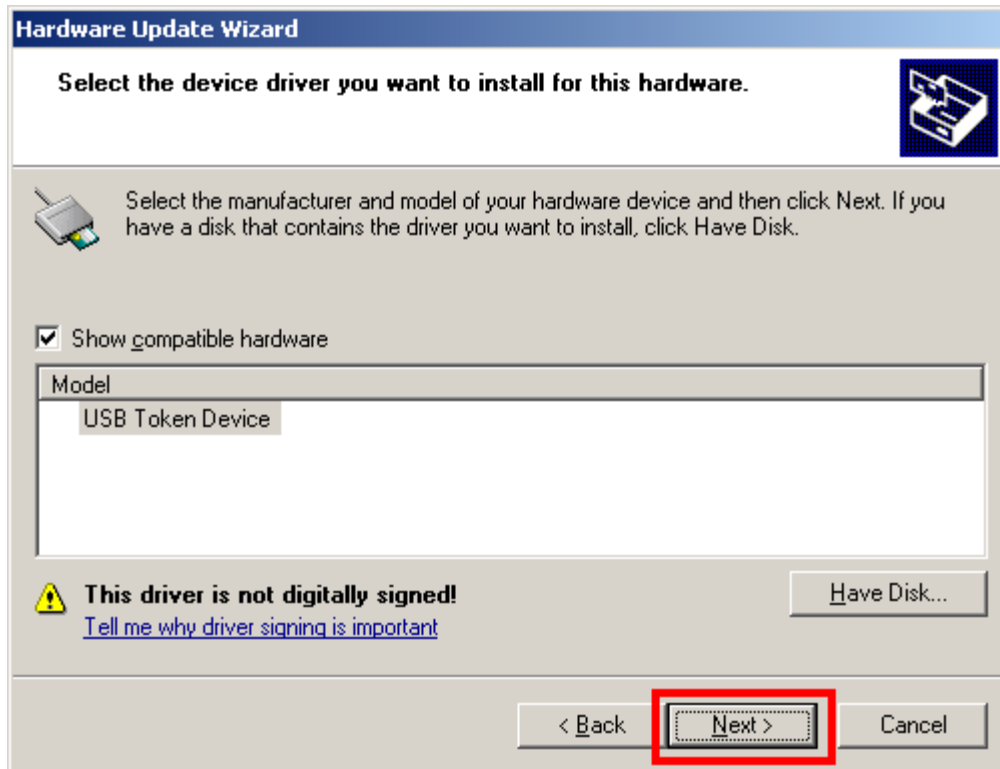

12. Click to "Continue Anyway" button

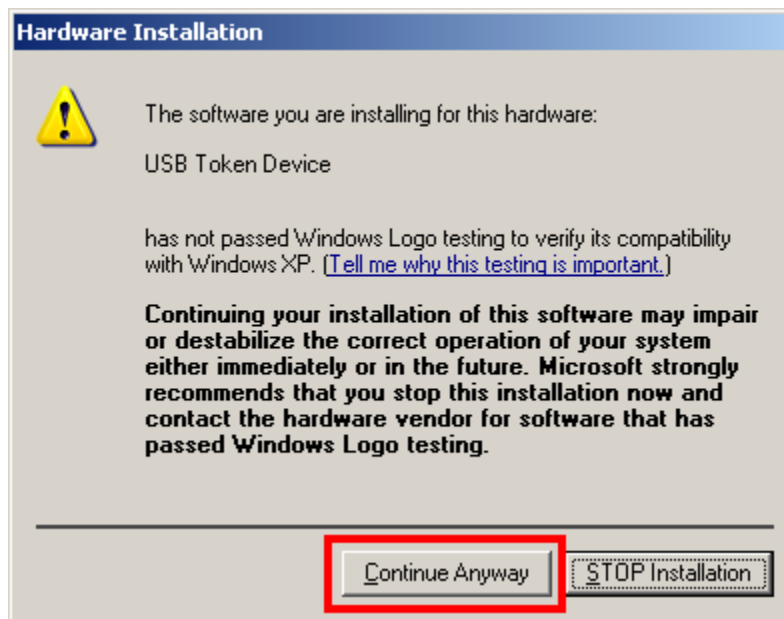

13. Go to **Device Manager**



14. Check drivers version after update

